Publication No. 4E9248
11FEB02

HEALTH IMAGING

Kodak Home Page on Internet

Tech Bulletin on Intranet

Table of Contents

Confidential
Restricted Information

© Eastman Kodak Company, 2002

INSTALLATION INSTRUCTIONS
for the
15 x 30 MAGAZINE KIT
for the
Kodak X-Omat MULTILOADER 7000
Service Code: 3444

Important
Qualified service personnel must install this kit.

PLEASE NOTE The information contained herein is based on the experience and knowledge relating to the subject matter gained by Eastman Kodak Company prior to publication.

No patent license is granted by this information.

Eastman Kodak Company reserves the right to change this information without notice, and makes no warranty, express or implied, with respect to this information. Kodak shall not be liable for any loss or damage, including consequential or special damages, resulting from any use of this information, even if loss or damage is caused by Kodak's negligence or other fault.

This equipment includes parts and assemblies sensitive to damage from electrostatic discharge. Use caution to prevent damage during all service procedures.

Packing List

15 x 30 MAGAZINE KIT 4E8247 includes:

Part No.	Description	Quantity
4E8220	FILM STOP	4
4E8249	15 x 30 FILM IDENTIFICATION LABEL	1
9189656	REFLECTIVE STICKER	2

Installing the New FILM STOPS

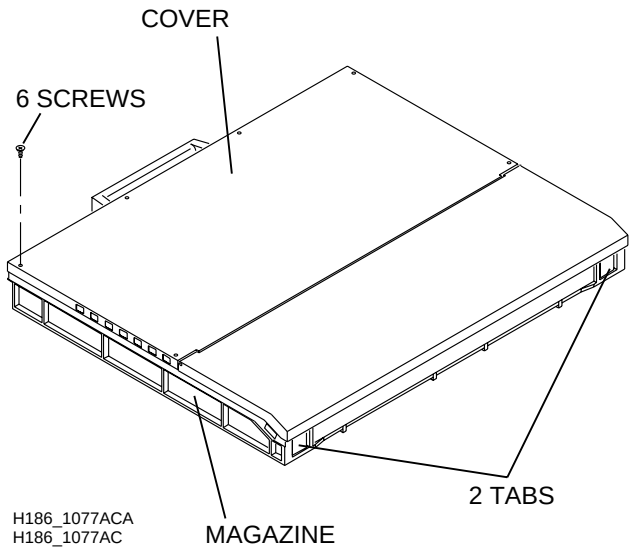

[1] Place the MAGAZINE on a flat surface.

[2] Remove the 6 SCREWS.

[3] Press the 2 TABS and remove the COVER.

[4] Place the existing LEFT and RIGHT SEPARATORS in the 4 RECESSES No. 30 with the 2 long STUDS toward the HANDLE and the 2 NIBS toward the film.

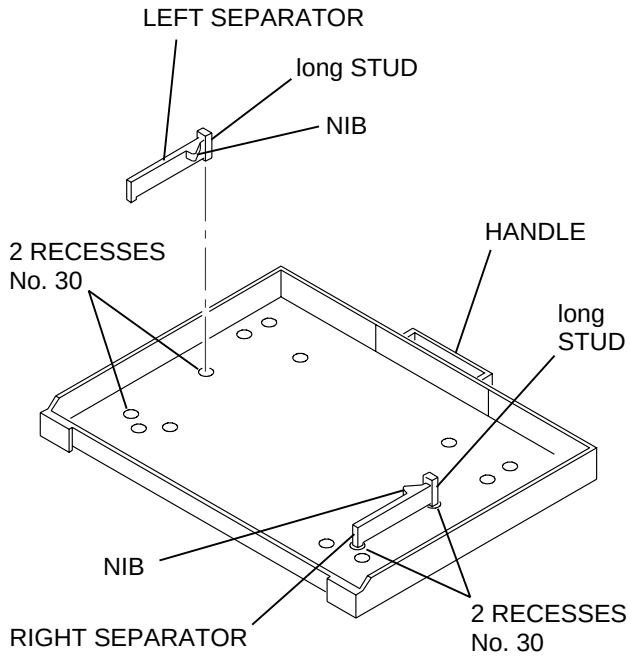

H186_1133GCA
H186_1133GC

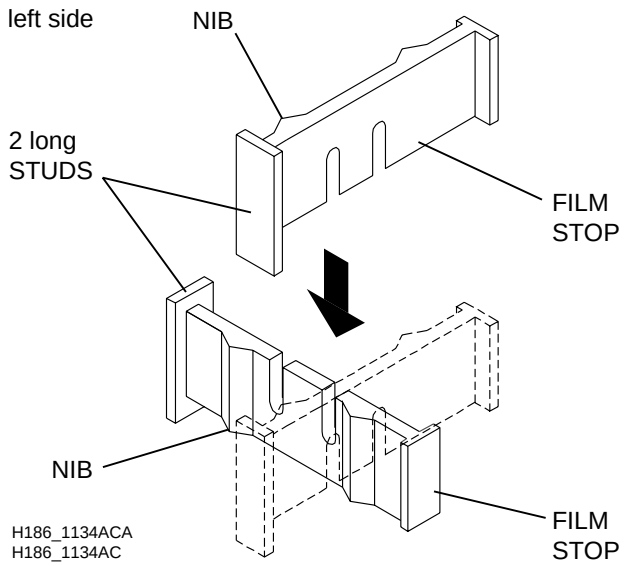

H186_1134ACA
H186_1134AC

Important

The 4 FILM STOPS are the same.

[5] Assemble the 2 new FILM STOPS for the left side. See the graphic for the correct position of the 2 NIBS and the 2 long STUDS.

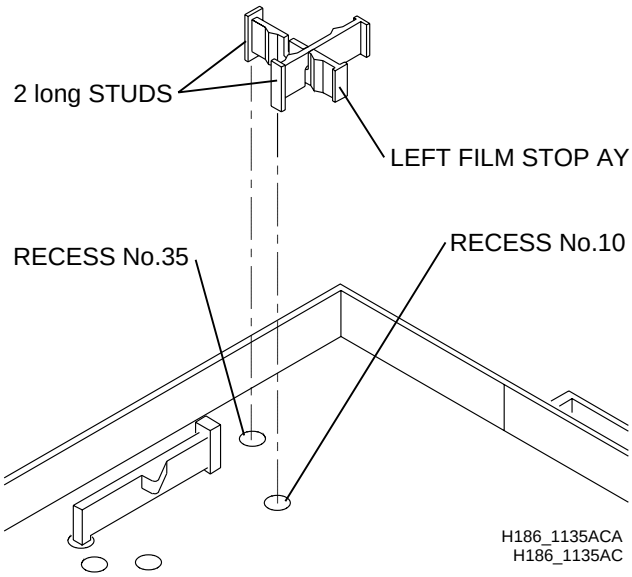

[6] Insert the 2 long STUDS of the LEFT FILM STOP AY into RECESS No. 35 and RECESS No. 10 on the left side of the MAGAZINE.

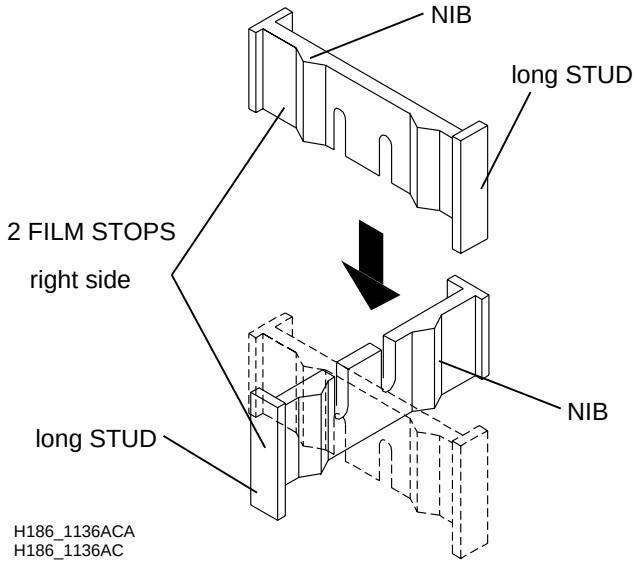

[7] Assemble the 2 new FILM STOPS for the right side. See the graphic for the correct position of the 2 NIBS and the 2 long STUDS.

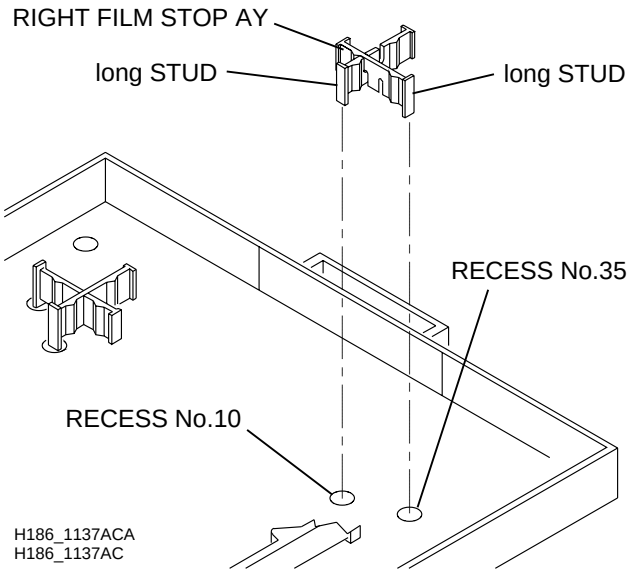

[8] Insert the 2 long STUDS of the RIGHT FILM STOP AY into RECESS No. 35 and RECESS No. 10 on the right side of the MAGAZINE.

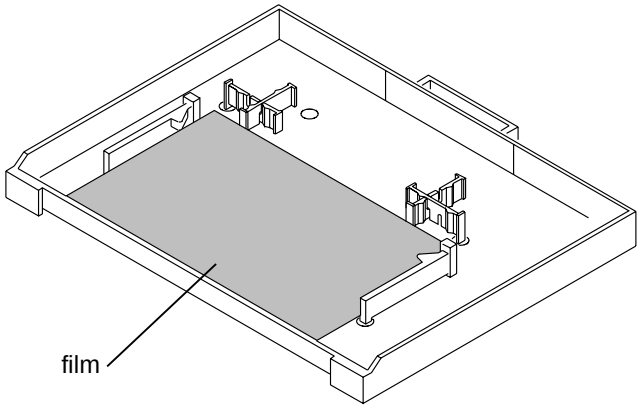

H186_1305ACB
H186_1305AC

[9] Insert a sheet of 15 x 30 film into the MAGAZINE to check that the size of the MAGAZINE is correct.

[10] Remove the sheet of 15 x 30 film.

[11] Install the COVER.

[12] Check that the COVER is seated correctly.

[13] Install the 6 SCREWS.

Installing the New REFLECTIVE STICKER and LABEL

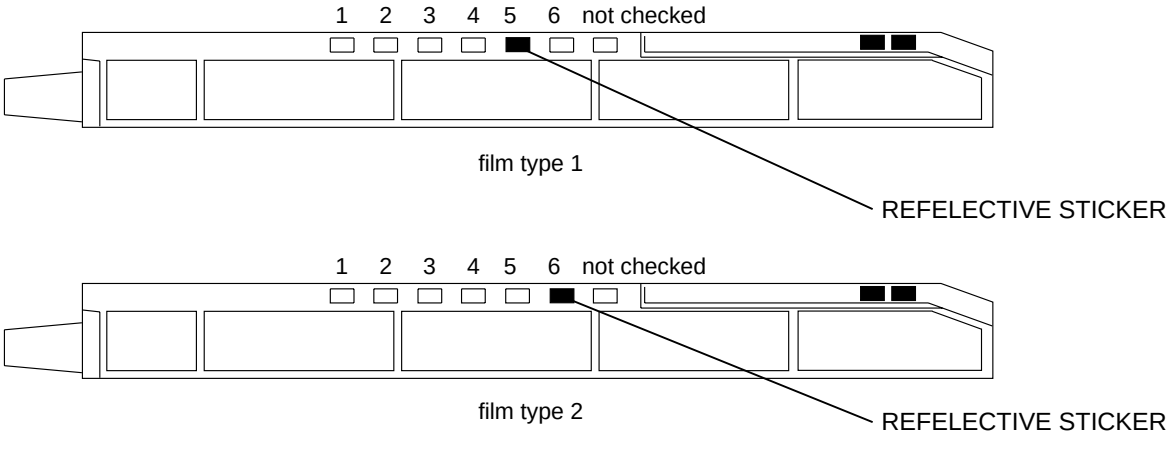

H186_1138BCA
H186_1138BC

[1] Install the new REFELECTIVE STICKER:

- film type 1 in position 5
- film type 2 in position 6

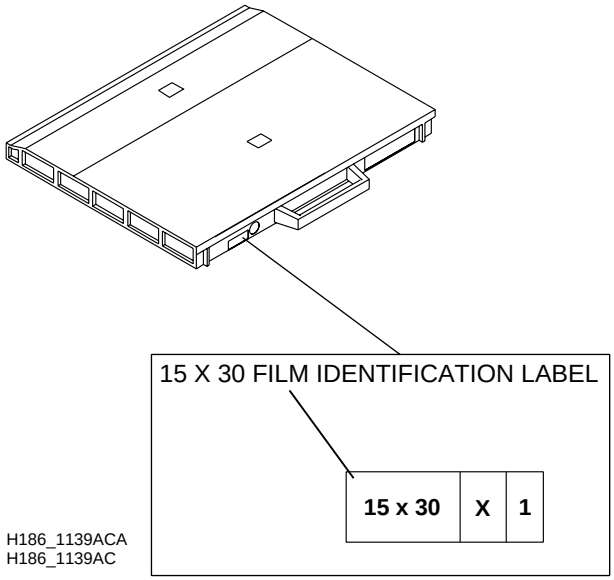

H186_1139ACA
H186_1139AC

[2] Install the new 15 x 30 FILM IDENTIFICATION LABEL for the correct film type.

Publication History

Publication Date	Publication No.	ECO No.	Changed Pages	File Name	Notes
11FEB02	4E9248	2665-057	------	4e9248.fm	New Publication

Kodak and *X-Omat* are trademarks.

Printed in U.S.A. • 4e9248.fm

EASTMAN KODAK COMPANY
Rochester, NY 14650

HEALTH IMAGING